




HD-1 Initiator Installation

Step 1: Remove the bolts from the back of the arm.

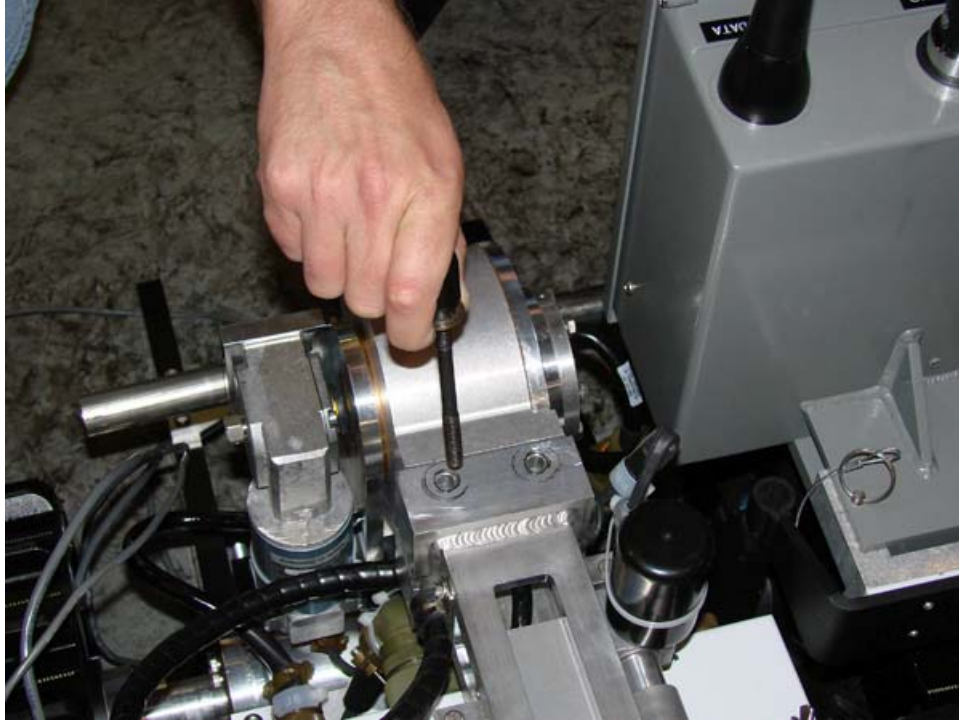

Step 2: Place the initiator on top of the arm and attach using the arm bolts.

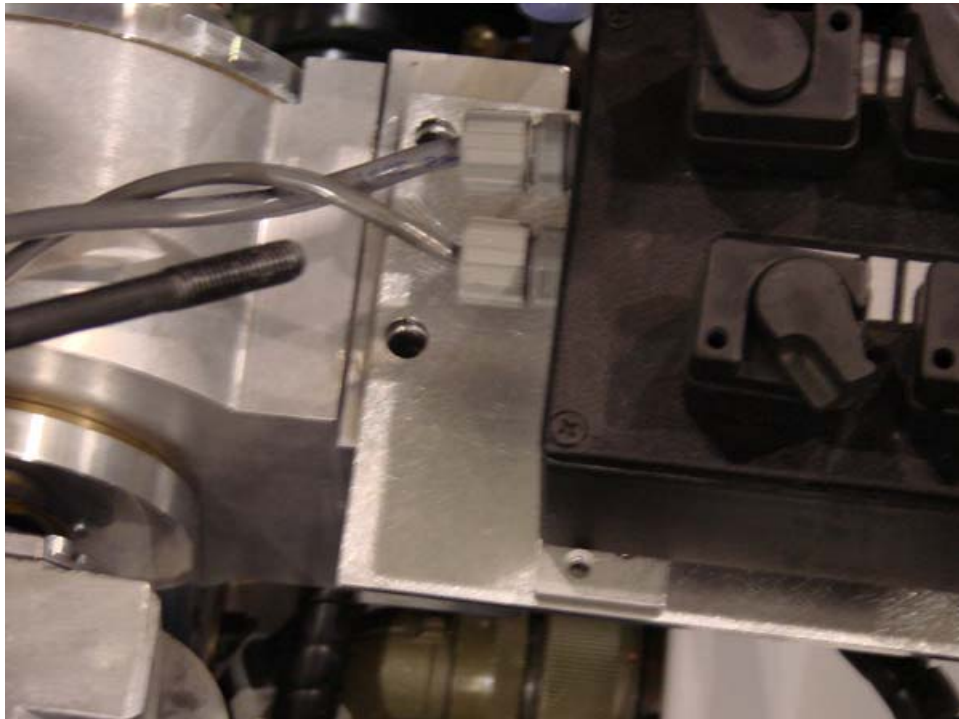


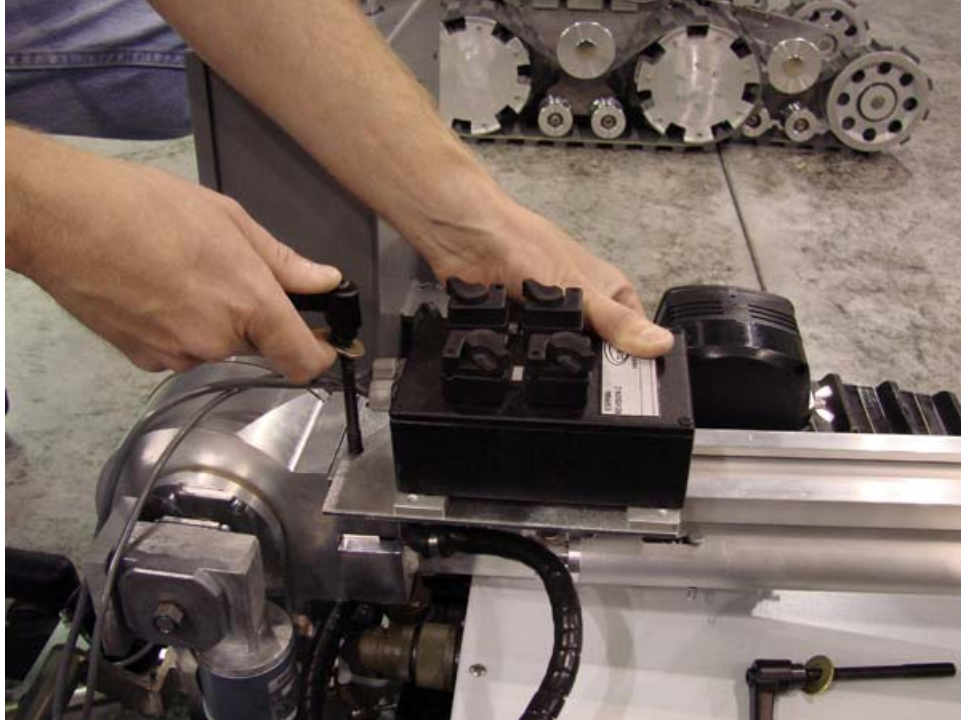


Step 3: The Duke Pro wiring should be attached as shown below after bolting to the arm.






Step 4: Raise the arm.

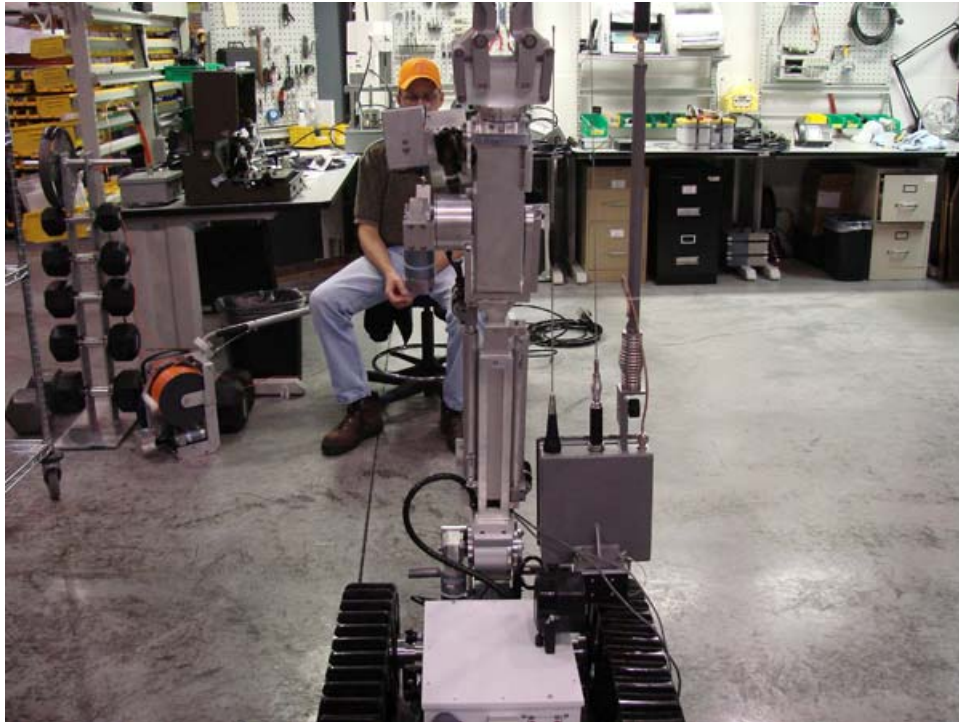

Step 5: Disconnect the electronics housing

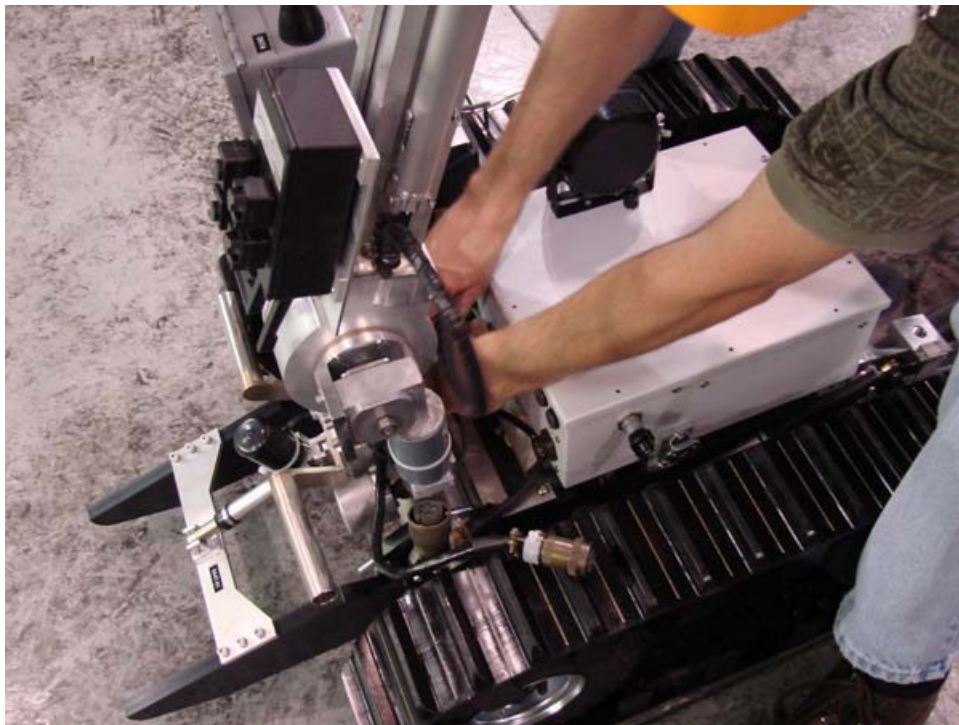


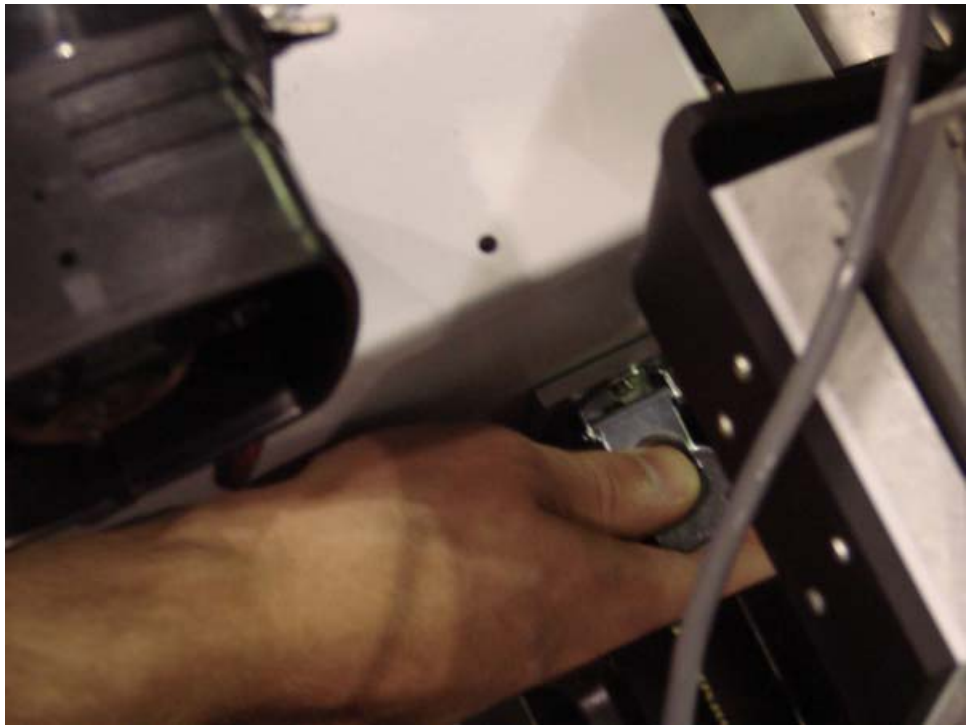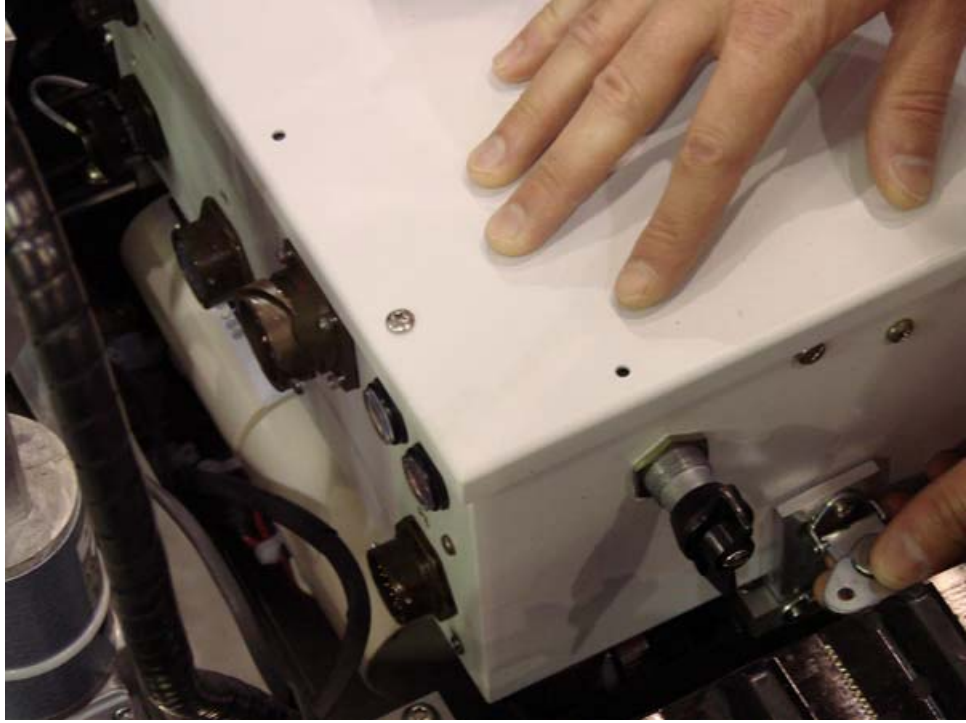

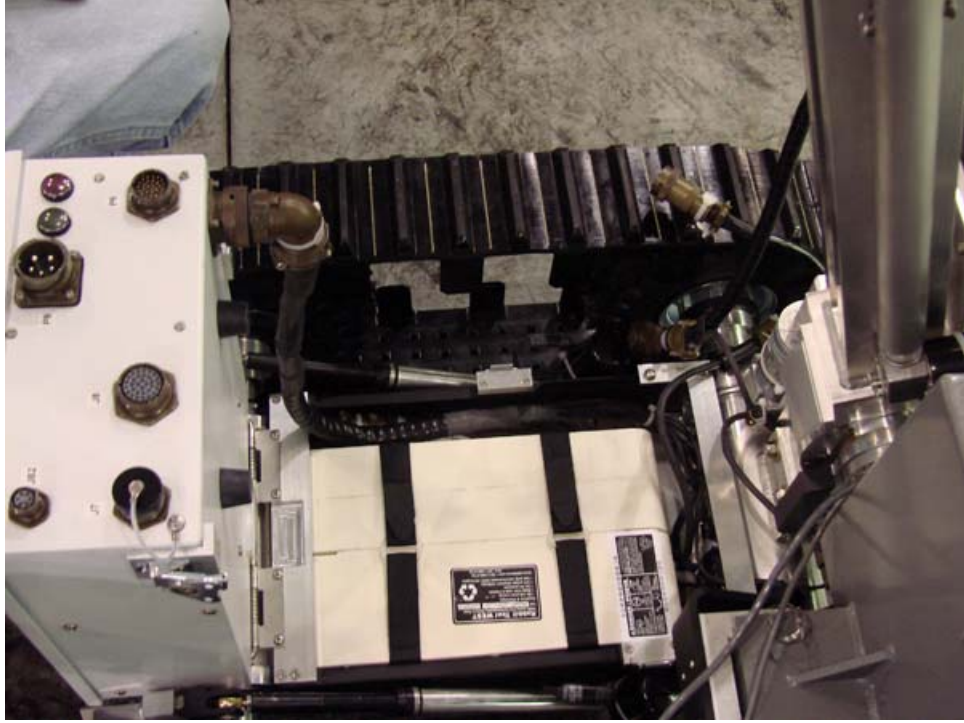




Step 6: Remove the Electronics Housing by releasing the pins.

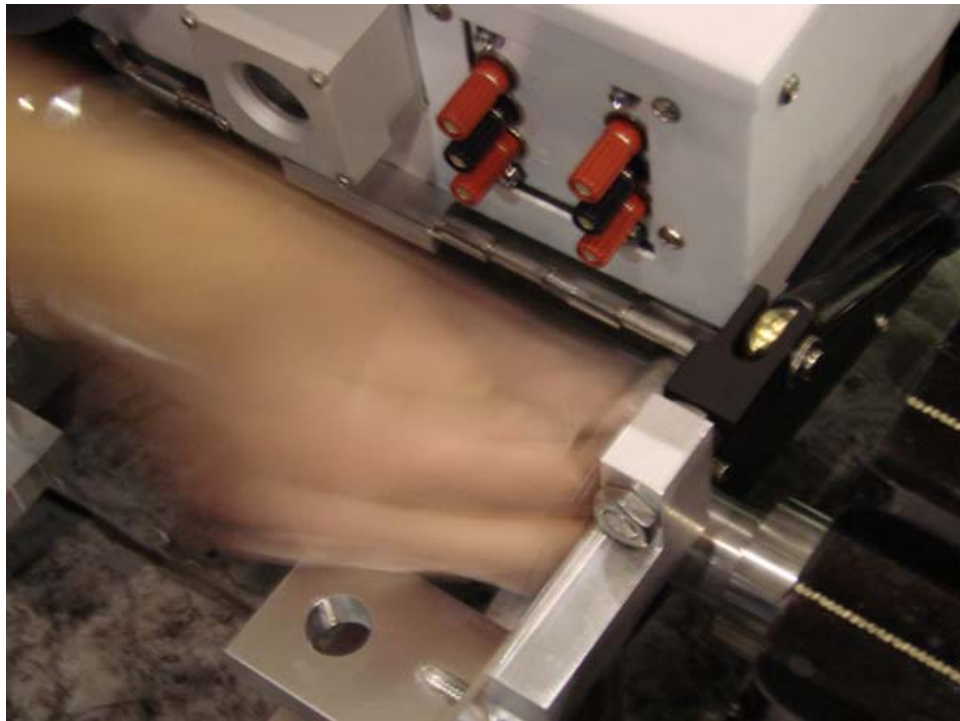


Step 7: Run wiring underneath the bracket.

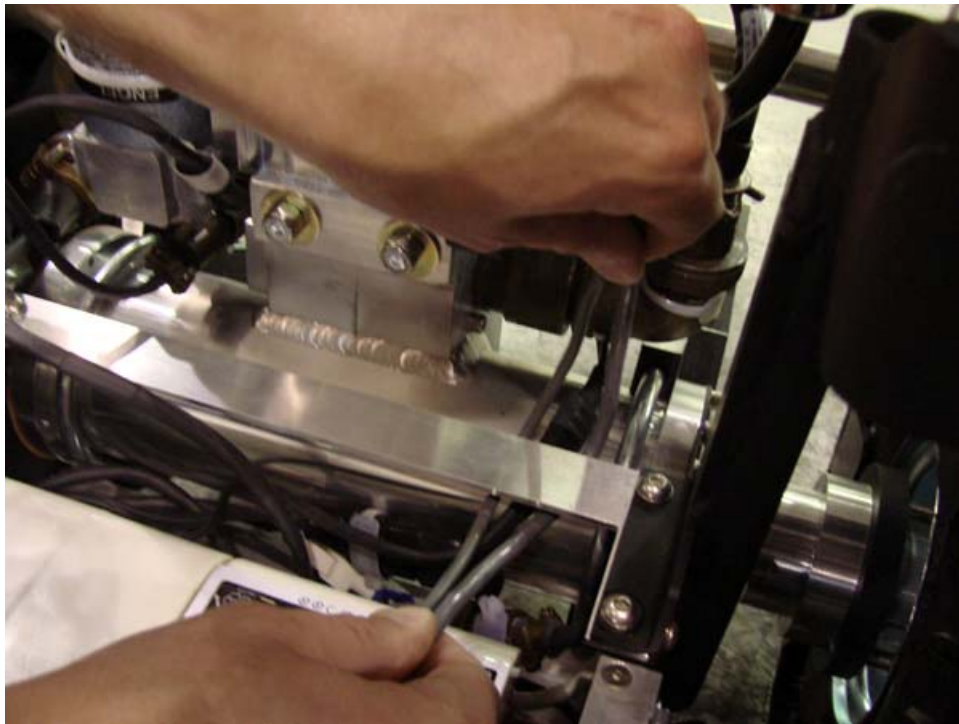


Step 8: Run wiring beside battery.




Step 9: Run wiring under bracket.

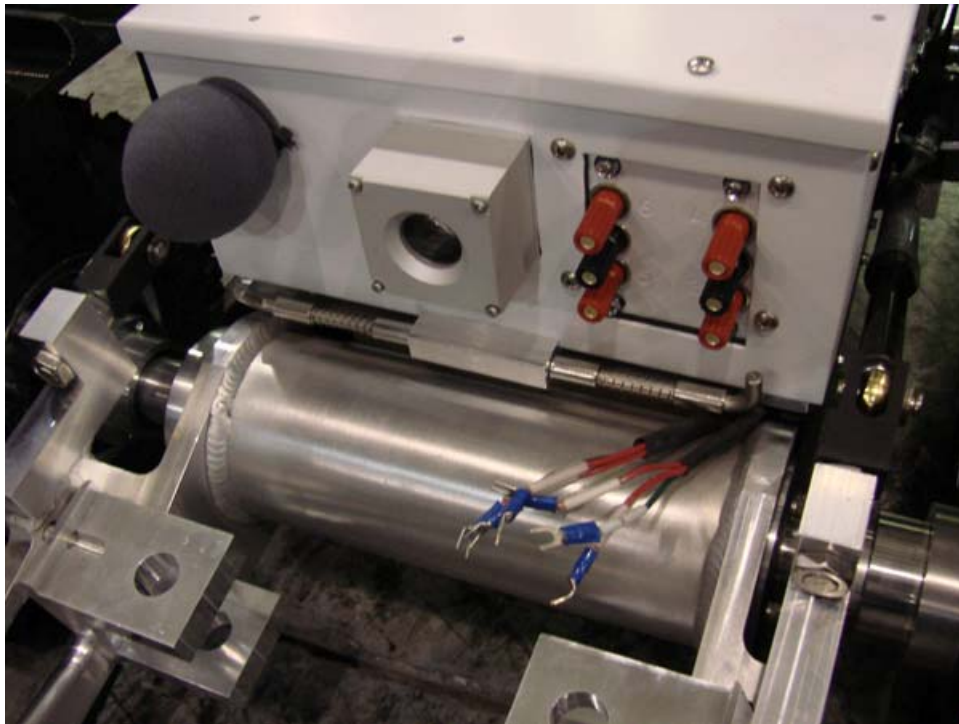

Step 10: Install housing and attach wiring.

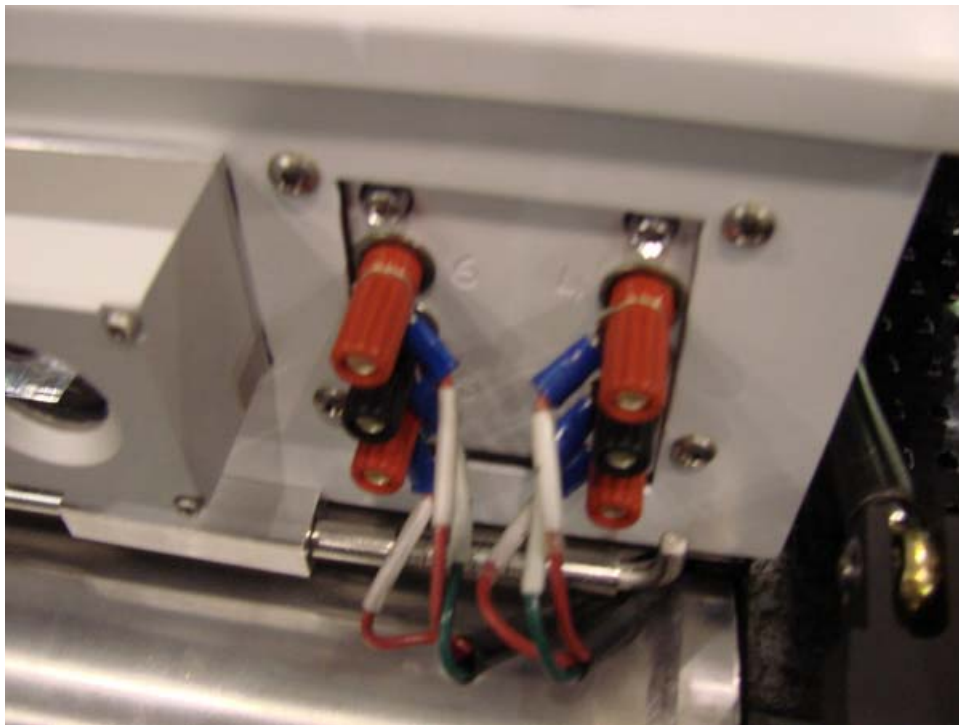

Step 11: Route the wiring beside the shoulder, leaving some slack.

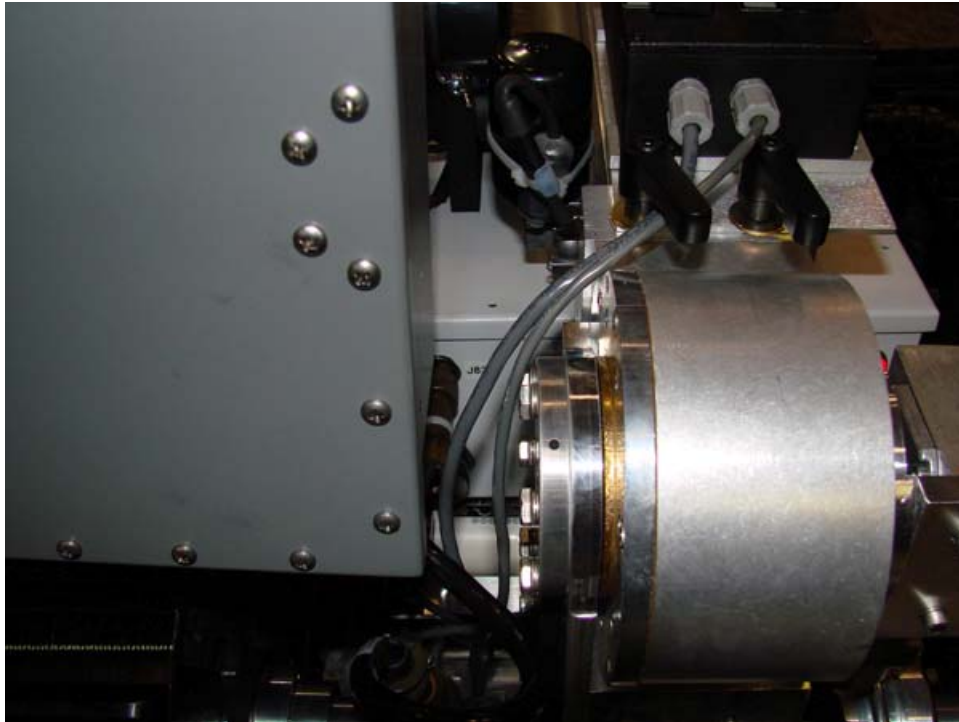

Step 12: Completed wire routing should look like the below image.

